
Seats, Heated Rear , (4A4),(9AK),(Q2J)

From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



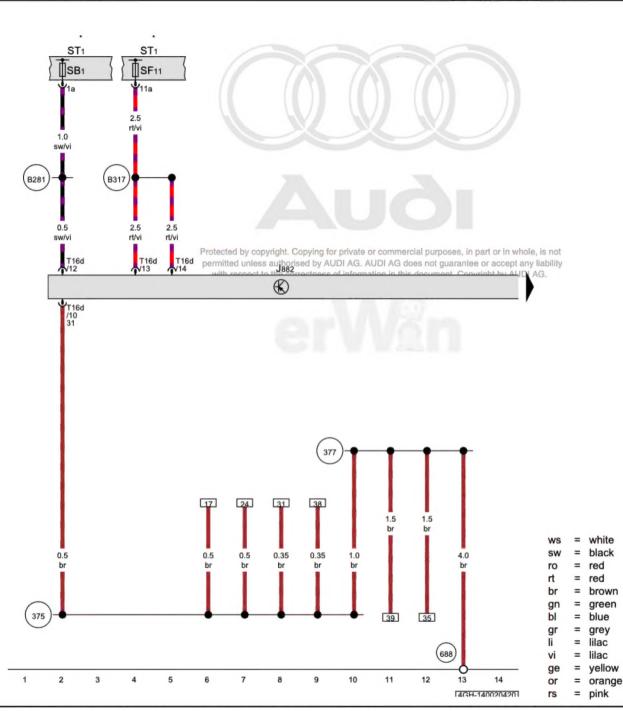

Seat Heating Control Module

- J882 Seat Heating Control Module SB1 Fuse 1 (On Fuse Panel B)
- ST1 Fuse Panel 1
- SF11 Fuse 11 (On Fuse Panel F) T16d 16-Pin Connector
- 375 Ground Connection 10 (in Main Wiring Harness)
- 377 Ground Connection 12 (in Main Wiring Harness)
- (688) Ground Connection 2 on Center Tunnel
- (B281) Positive Connection 5 (15a) (in Main Wiring Harness)
- (B317) Positive Connection 3 (30a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

6

16

Wiring Diagram

= white = black = red

= red = brown = green

= blue = grey = lilac = lilac = yellow

= orange

= pink

or

rs

gr/bl B731 B732 0.35 gr/bl gr/bl 21 28 J882 (**4**T16d T16d **€**T16d 4T16d T16d T16d T16d 0.35 0.35 0.35 0.35 0.35 0.35 0.35 gn/rt bl/vi bl/ge bl/ws gr/vi gr/ws B645 21 0.35 0.35 0.35 0.35 gn/rt gr/bl gn/rt gr/bl T6bi T6bi T6bi T6bi T6bk T6bk V2 T6bk √3 T6bk T6bk E653 E654 0.5 0.5

21

22

23

7

24

25

27

[4GH-140030420]

Left Seat Heating Button, Seat Heating Control Module

E653 Left Seat Heating Button

E654 Right Seat Heating Button

J882 Seat Heating Control Module

Γ6bi 6-Pin Connector

T6bk 6-Pin Connector

T16d 16-Pin Connector

(B645) Heated Seat Connection 2 (in Main Wiring Harness)

B731 Connection 58s (in Main Wiring Harness) 1

B732 Connection 58s (in Main Wiring Harness) 2

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



J882 Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not guarantee or accept any liability (nent. Copyright by AUDI AG. T16d ₽_{T16d} T16d /16 12 8 11 0.35 0.35 1.5 1.5 0.35 0.35 sw/gn sw/ge T6t 0.5 0.5 1.5 1.5 1.5 0.5 0.5 1.5 1.5 sw/ws gn/br rt/ws br/ws sw/ws gn/br rt/ws br/bi br/ws T2fm T2fm 1/2 T2fn = white = black = red 1.5 1.5 1.5 = red rt/ws rt/ws br/ws br/ws = brown = green = blue = grey Z10 Z11 G94 G95 **Z**12 Z13 = lilac vi = lilac = yellow 40 31 32 33 34 37 39 41 = orange or [4GH-140040420] rs = pink

Seat Heating Control Module, Left Rear Bench Seat Heating Element, Right Rear Bench Seat Heating Element

- G94 Left Rear Heated Seat Temperature Sensor
- G95 Right Rear Heated Seat Temperature Sensor
- J882 Seat Heating Control Module
- T2fm 2-Pin Connector, In the Left Rear Seat
- T2fn 2-Pin Connector, In the Right Rear Seat
- 6-Pin Connector, In the Coupling Point for the Left Rear Seat
- 6-Pin Connector, In the Coupling Point for the Right Rear Seat
- T16d 16-Pin Connector
- Left Rear Bench Seat Heating Element
- Z11 Left Rear Backrest Heating Element
- Right Rear Bench Seat Heating Element
- Right Rear Backrest Heating Element